


Single motor lifting table instructions

Controller Interface Introduction

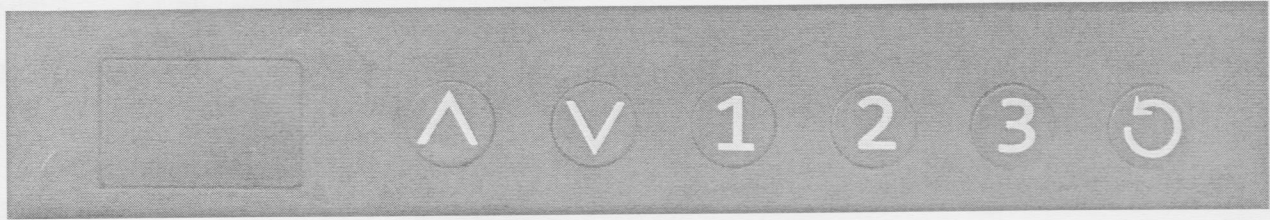

- ◆ ■: Display screen
- ◆ ^: Up
- ◆ v: Down
- ◆ 1: The first storage & memory key
- ◆ 2: The second storage & memory key
- ◆ 3: The third storage & memory key
- ◆ ↻: Master reset

Up or Down button operation

- ◆ When the "^" key is held down, the desktop moves up until it reaches the highest point of the desktop.
- ◆ When the "v" key is held down, the desktop runs down until it reaches the lowest point of the desktop.
- ◆ When you press the "^" or "v" key, the desktop runs a short distance to achieve a short distance up or down.

Location store/Memory location run

- ◆ Location storage: Three memory points can be stored. The storage method is as follows: when running to a specific point, long press the "1/2/3" key until the number flashes, and the current height is successfully stored to the corresponding label.
- ◆ Memory location: Short press the "1/2" key, the digital flash memory position height 2 seconds, the desktop automatically runs to the height of the memory position, running, any key can stop running.

Master rest

- ◆ Long press "↻" for 3 seconds until the controller operation indicator flashes "--", then release and press the down button to enter the reset mode. The desktop will automatically run down and then look for the highest and lowest positions upward. The desktop automatically moves down to the fixed position. The reset process is complete.

Locking and unlocking

- ◆ Locking: Press and hold "1" and "2" for 5 seconds at the same time. When the display displays "L", it means that the system has been locked and cannot be lifted or lowered.
- ◆ Unlocking: Press and hold "1" and "2" for 5 seconds at the same time. When the display displays from "L" to the normal digital display, the system has been unlocked.

Stand and sit reminder (countdown mode)

- ◆ Countdown time: three stages are provided, T30 = 30 minutes, T45 = 45 minutes, T60 = 60 minutes.
- ◆ Start countdown: Press "⏸", then the display will show T30/T45/T60 in turn, and the countdown will start.
- ◆ Exit countdown: 1. Press "RST" to display the number on the display;
2, countdown to, the display will flash chr, the flashing time is 1 minute, press any key to stop the timing and exit;
3. Without any operation, the timer will be automatically stopped after 3 consecutive reminders at an interval of 5 minutes.

Restore factory Settings

- ◆ Method: Hold down "1" and "3" for 5 seconds at the same time, and the digital tube displays "C L r", which means that the parameters are restored successfully.

Error code table

Error code	Instructions	Processing method
E01	Motor not connected	Press the up button or down button, if it still exists. Please check the motor connection wire.
E02	Over current of motor	Press the up button or down button, if it still exists. Please replace the motor or reduce the load.
E03	Motor hall fault	Press the up button or down button, if it still exists. Please check the connection or replace the motor.
E04	The main power supply is abnormal	After power failure can not be eliminated, replace the power supply.
E05	Abnormal motor current	This condition cannot be eliminated after power failure and needs to be returned to the factory for maintenance.
E06	The motor power device is damaged	This condition cannot be eliminated after power failure and needs to be returned to the factory for maintenance.
E08	Over temperature protection	Wait for the temperature to drop.
E09	Locked-rotor motor current	Press the up button or down button, if it still exists. Please replace the motor or reduce the load.
RST	Illegal power cut	Reduce the load or check whether the power cable is loose.